

The push button can be installed on the top or front panel of a furniture WC unit in a variety of positions. Check for obstructions before cutting any panels.