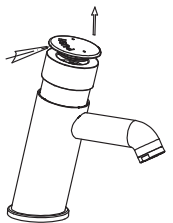
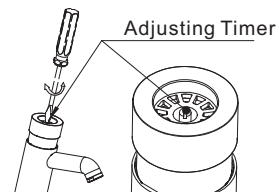
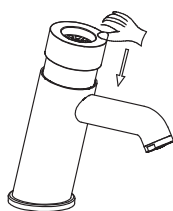
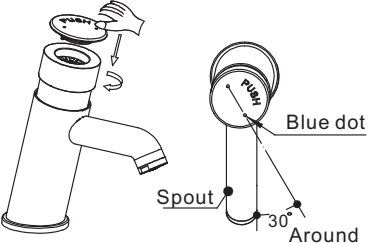



Installation and Maintenance instruction

Technical Information:

- Flow Rate: 0.14L/S in 10 Sec /2 Bar
- Max. Working Pressure: 5 Bar
- Min .Working Pressure: 0.5 Bar.
- Cut Off Time : 4-12 Sec / 2Bar
- Max Working Temperature: 55 degrees Celcius between Max.and Min. working pressure.

Note : Follow below steps to adjust shut off time.

<p>①</p> <p>Take out the cover</p> 	<p>②</p> <ol style="list-style-type: none">1. Use the hand to hold the handle tight when adjust the time.2. Turn screwdriver anti-clockwise to reduce the water flow time. Turn screwdriver clockwise to increase water flow time. Adjust time between 6s-9s. <p>Adjusting Timer</p> 
<p>③</p> <p>Push the handle and confirm the shut time within 6~9s .</p> 	<p>④</p> <p>Rotate handle to left and press cover to make the blue dot align with the spout .</p> 

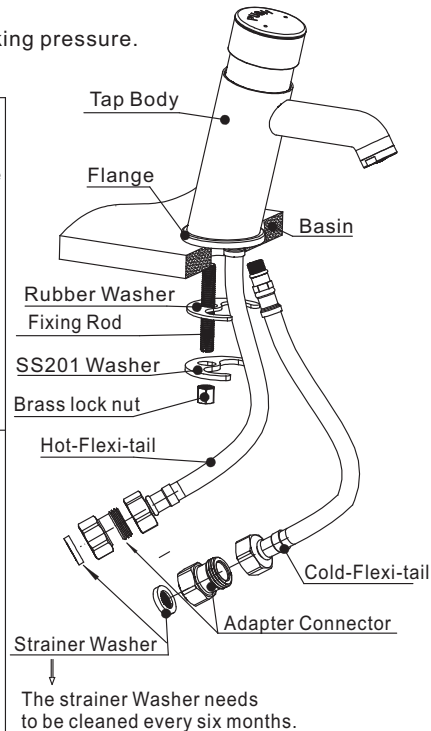

Installation and Maintenance instruction

Technical Information:

- Flow Rate: 0.14L/S in 10 Sec / 2 Bar
- Max. Working Pressure: 5 Bar
- Min .Working Pressure: 0.5 Bar.
- Cut Off Time : 4-12 Sec / 2Bar
- Max Working Temperature: 55 degrees Celcius between Max. and Min. working pressure.

Note : Follow below steps for maintenance:

