

148.00 mm

210.00 mm

1. Identify all components are present prior to installation.
2. Put waste flange (1) and Rubber washer (2) into the basin hole.
3. Install the Rubber washer (3) and backnut (4), then tighten the backnut.
4. Check all joints and connections for leaks. If necessary, use the sealing glue.

1. Waste flange
2. Rubber washer
3. Rubber washer
4. Backnut

