


148.00 mm

210.00 mm

Assembly Instruction

1. Identify all components are present prior to installation.
2. Place waste flange (1) and rubber washer (2) into the basin hole.
3. Install the rubber washer (3) and backnut (4), then tighten the backnut.
4. Check all joints and connections for leaks. If necessary, use the sealant.
5. Clean with warm soapy water only.

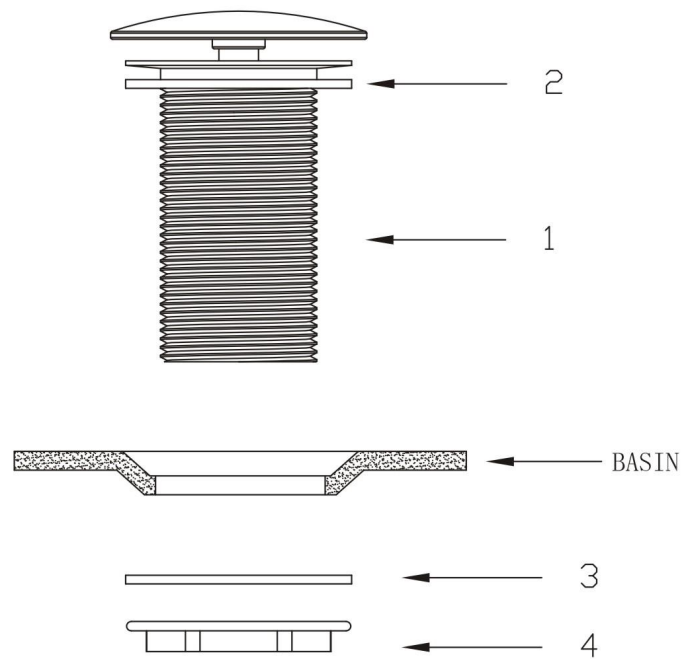

- | | |
|------------------|-----|
| 1. Waste flange | X 1 |
| 2. Rubber washer | X 1 |
| 3. Rubber washer | X 1 |
| 4. Backnut | X 1 |